


EZbasket™


ASSEMBLY INSTRUCTIONS TAPERED PLATE DOWEL

1. Secure the EZ Basket jig onto a platform such as sawhorses or workbench (**we recommend three (3) sawhorses, secured with 4" deck screws**).
2. Place the EZ Basket sleeve in the precut slot in the EZ Basket jig.
3. Insert the tapered dowel into the EZ Basket sleeve.
4. Press the EZ Basket side frame into the end slots on the EZ Basket sleeve.
5. Press an EZ Basket clip into each end of the EZ Basket sleeve to securely fasten the tapered dowel, side frame and sleeve together (**Note arrow on clip surface indicating correct installation orientation of basket clip**).
6. Remove the assembled EZ basket from the EZ basket jig.

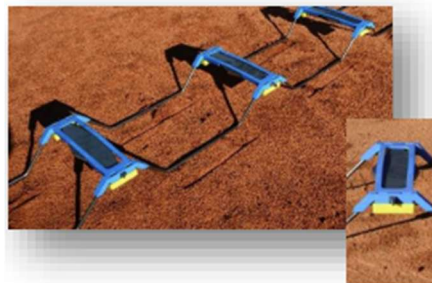

ADDITIONAL INSTALLATION INSTRUCTIONS

- Whenever possible, pin the EZ Basket side frame to the subgrade securely
- Apply a debonding agent, such as Tectyl 506 or approved equal to the dowels, **tapered or round**, in a uniform thickness
- Do not assemble the EZ Basket in temperatures below 45 degrees. Perform the assembly indoors if this occurs.
- US patent numbers - US 11149385, US D922857, and US D922858 apply to the EZ Basket product.

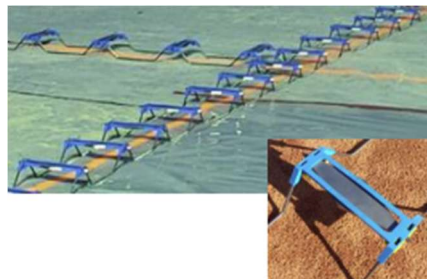

Thank You for your interest in McTech Group!

Website: www.mctechgroup.com